


Where the flow of water is sheeting, place sod strips perpendicular to the direction of water flow.

SHINGLING SOD

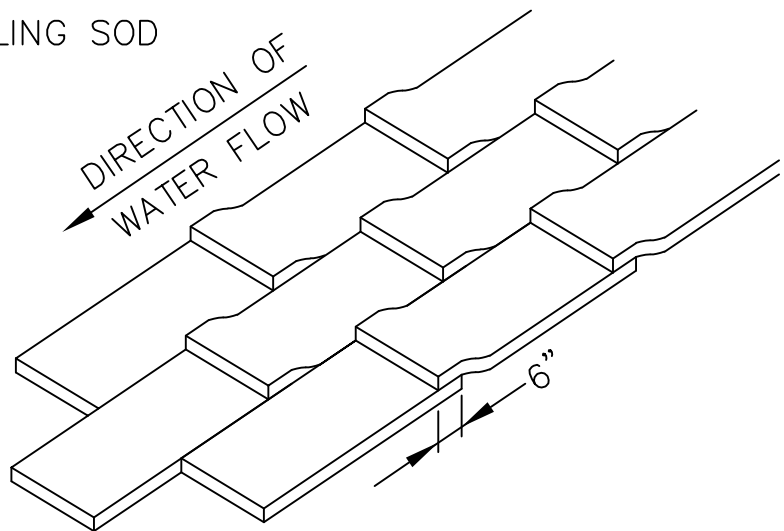

Where the flow of water is concentrated, place sod strips parallel to the direction of water flow.

OVERLAPPING SOD

NOTE:

Although pegging on sod is not specifically required it is understood that the contractor will be responsible for the successful establishment of the sod including repair or replacement of sod which becomes displaced or damaged due to lack of protection or proper care.



**CITY OF
CHANHASSEN**

SOD
PLACEMENT

REVISED: 1-10

FILE NAME: G:\ENG\SPECS\5303

ENGINEERING DEPARTMENT

PLATE NO.:

5303